

LARDIS:ONE

How do I connect external components to the new LARDIS:ONE?

There is a mini-USB jack on the cradle above the connection cable, which can be used to connect POCSAG receivers or controls, among others, via an included OTG adapter.

Please note that additional connection cables may be required depending on the component. Please contact our [sales partners](#) for more information.

Under the following link you will find the installation instructions / connection description for external operating elements or POCSAG receivers: [Open link](#)

Unique solution ID: #1084

Author: Tech. Support

Last update: 2023-02-10 13:47