

LARDIS:ONE mini

How do I install or update maps in the new LARDIS:ONE (Mini)?

Maps can be installed / updated via USB using the [setup software](#). Already installed maps are checked for up-to-dateness and displayed with a note in the [setup](#) after expiration.

The map management can be found in the [setup](#) under ACTIONS -> "Manage maps" or in the loaded configuration.

All maps are first downloaded to the computer and can then be installed on the LARDIS:ONE (Mini) (or more). For downloading to the computer it is not necessary to connect the LARDIS:ONE (Mini).

Unique solution ID: #1082

Author: Tech. Support

Last update: 2023-02-10 13:40